

Left hand (L) shown.

Designation	DCONMS	LF	LH	H	WB	WF	Insert
JS14H-STCL18	14	100	20	13	14	6	TC*18R...
JS159F-STCL18	15.875	85	20	15	14	6	TC*18R...
JS16F-STCL18	16	85	20	15	14	6	TC*18R...
JS19G-STCL18	19.05	90	20	18	14	6	TC*18R...
JS19X-STCL18	19.05	120	20	18	14	6	TC*18R...
JS20G-STCL18	20	90	20	19	14	6	TC*18R...
JS20X-STCL18	20	120	20	19	14	6	TC*18R...
JS22X-STCL18	22	120	20	21	12.25	10	TC*18R...
JS25H-STCL18	25	100	20	24	12.25	10	TC*18R...
JS254X-STCL18	25.4	120	20	24	12.25	10	TC*18R...


Note: Use reft-hand toolholders (L) with right-hand inserts (R).

SPARE PARTS

Designation	Clamping screw	Wrench
JS**STCL18	CSTC-4L100DL	T-1008/5

DUOJUST CUT

DuoJust-Cut JSXXR/L

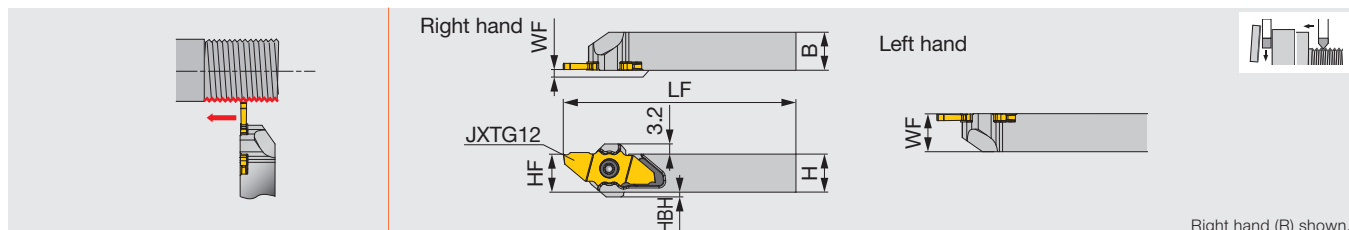

Right hand (R) shown.

Designation	H	B	WF (R/L)	LF*	HF	HBH	Insert
JSXXR/L1010X09	10	10	0.2 / 9.8	118	10	3	JX...
JSXXR/L1212F09	12	12	0.2 / 9.8	83	12	1.5	JX...
JSXXR/L1212X09	12	12	0.2 / 9.8	118	12	1.5	JX...
JSXXR/L1616X09	16	16	0.2 / 9.8	118	16	0	JX...
JSXXR/L2020H09	20	20	0.2 / 9.8	98	20	0	JX...

*This toolholder can be used with threading and grooving inserts. With parting inserts, the dimension of LF will be different depending on the insert shape.

Note: Use right-hand toolholders (R) with right-hand inserts (R); and left-hand toolholders (L) with left-hand inserts (L)

SPARE PARTS

Designation	Clamping screw	Wrench
JSXXR*****	CSTC-4L100DL	T-1008/5
JSXXL*****	CSTC-4L100DR	T-1008/5

