




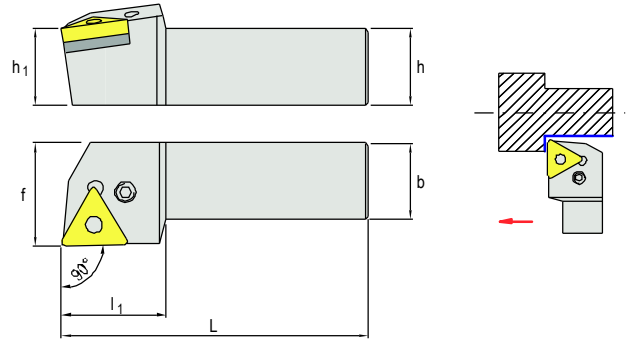
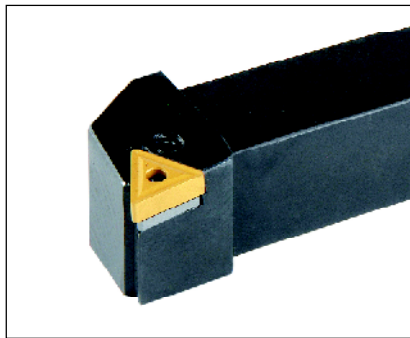







Kod Code Bezeichnung	Ölçüler Dimensions Abmessungen									
	h h ₁	b	L	l ₁	f	Uç Tipi Insert Type Plattentype	Altlık Anvil Unterlage	Levyeye Lever Hebel	Levyeye Vidası Lever Screw Hebel Schraube	Altlık Pimi Anvil Pin Rohrstift
PSKNR/L 16 16 H09T	16	16	100	16	20	SN.....0903	U 053450	H 018440	S 011429	R 018463
20 20 K12T	20	20	125	23	25	SN.....1204	U 063451	H 023441	S 023421	R 023461
25 25 M12T	25	25	150	23	32					
32 25 P12T	32	25	170	23	32					
25 25 M15T	25	25	150	28	32	SN.....1506	U 000457	H 000840	S 028430	R 025464
32 25 P15T	32	25	170	28	32					
32 32 P15T	32	32	170	28	40					
32 32 P19T	32	32	170	33	40	SN.....1906	U 083452	H 033442	S 033422	R 033462
40 40 R19T	40	40	200	33	50					
40 40 R25T	40	40	200	38	50	SN.....2507	U 092453	H 038444	S 038427	R 038465
50 50 S25T	50	50	250	38	60					



Kod Code Bezeichnung	Ölçüler Dimensions Abmessungen									
	h h ₁	b	L	l ₁	f	Uç Tipi Insert Type Plattentype	Altlık Anvil Unterlage	Levyeye Lever Hebel	Levyeye Vidası Lever Screw Hebel Schraube	Altlık Pimi Anvil Pin Rohrstift
PTGNR/L 16 16 H11T	16	16	100	18	20	TN.....1103		H 011446	S 011429	
16 16 H16T	16	16	100	20	20	TN.....1604	U 013950	H 018440	S 018420	R 018463
20 20 K16T	20	20	125	20	25					
25 25 M16T	25	25	150	22	32					
32 25 P16T	32	25	170	22	32	TN.....2204	U 023952	H 023441	S 023421	R 023461
25 25 M22T	25	25	150	28	32					
32 25 P22T	32	25	170	28	32					
32 32 P22T	32	32	170	28	40	TN.....2706	U 013954	H 028443	S 000831	R 025464
32 32 P27T	32	32	170	35	40					
40 40 R27T	40	40	200	41	50					